
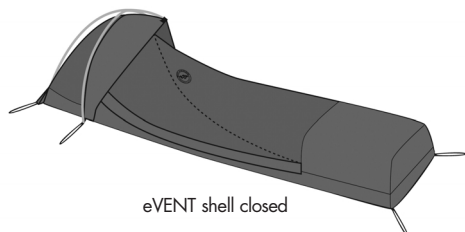
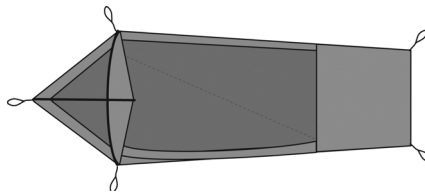


-----  
 Cut here to remove. Do Not Tear! -----



eVENT shell closed



Top View

## THREE WIRE BIVY SETUP INSTRUCTIONS

1. Remove all contents from stuff sack and spread the bivy body on the ground.
2. Assemble the pole-set assuring that each section is fully seated.
3. Insert the only blunt end on the poleset into the black webbing pocket located on the top of the bivy hood.
4. Insert the opposite end of the blunt-tipped pole into the grommet on the stakeout point at the head of the bivy.
5. Insert the two pole tips on the remaining pole into the grommets on each side of the head of the bivy.
6. Attach all Twist Clips to the poleset.
7. Stake out the three webbing loops at the head and two loops at the foot of the bivy.

**Separate 6", large diameter pole segment included for emergency field repair.  
 Slide repair pole over the break to act as a splint.**

**Helpful Tip:** Unzip the opening of the bivy when folding or stuffing to allow air to escape.

**DAC Hardware:**



Twist Clip

## HELPFUL HINTS

- Our shelters are easy to set up but we suggest you practice once at home before using them for the first time to avoid fumbling around in the dark.
- Before pitching the bivy, clear campsite of debris that may pierce the floor.
- Big Agnes bivy sacks don't require stakes, but we recommend staking them out to increase space and keep your bivy from becoming a tumbleweed.
- Hang onto your stuff sacks while pitching or they'll blow away and create backcountry litter.



Cut here to remove. Do Not Tear!

## Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

**info@bigagnes.com** or call toll free **877-554-8975**

### TENT CARE

#### Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in very hot temperatures (such as a car trunk), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

#### Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

#### Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

#### Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent.

#### Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired at a reasonable charge. Tents returned for repair must be clean and free of debris.



P.O. Box 773072 • Steamboat Springs, Colorado • 80477  
Toll Free: 877.554.8975 • info@bigagnes.com • www.bigagnes.com